



EPL Environmental Monitoring Points			
Point No	Purpose	Easting	Northing
1	Licensed Discharge Point	370556.8	6354097.9
2	Licensed Discharge Point	366683.2	6354980.4
12	Attended Noise Monitoring Location	365643.1	6354663.5
13	Attended Noise Monitoring Location	365707.2	6355220.5
14	Attended Noise Monitoring Location	367288.2	6355451
15	Attended Noise Monitoring Location	367297.1	6355187.6
16	Attended Noise Monitoring Location	367648.5	6355228.2
17	Attended Noise Monitoring Location	367962.3	6355375.5
18	Attended Noise Monitoring Location	366744.3	6355649
19	Meterological Station	369595.2	6354332.7
20	Attended Noise Monitoring Location	365973.7	6352811.7
21	Licensed Discharge Point	366741.9	6353939.5
22	Ambient Water Quality Monitoring	365753.0	6354080.1
23	Ambient Water Quality Monitoring	366791.8	6354094.2

DISCLAIMER
 ERR Australia makes every effort to ensure the quality of the information available on this map. ERR Australia cannot guarantee and assumes no responsibility for the accuracy, currency or completeness of the information and by using this map you agree ERR Australia has no liability for any loss or damage in any form whatsoever caused directly or indirectly from the use of this map.

Legend

- EPL1360 Premise Boundary
- Final Void
- Licensed Discharge Point
- EPL1360 Premise Boundary Corners
- Dams
- Ambient Water Quality Monitoring
- Coarse Refuse Limit
- Attended Noise Monitoring Location
- Tailings Dam
- Meterological Station